

## USB42CHD REPLACEMENT MANUAL

This USB accessory provides charging capabilities via USB-B and USB-C receptacles. Below are general instructions to assist in the replacement of the installed 12V Power Receptacle.

**\*\*BEFORE CONTINUING WITH THE STEPS BELOW, REMOVE POWER FROM THE BATTERY\*\***

\*Note: Photos used to show replacement are from a 3025E.

1. Locate the Panel on the Tractor that contains the 12V Power Receptacle.



2. Screws and Bolts to remove the Panel to gain access to the 12V Receptacle will be in the underside of the Fender.




3. Once access is gained to the underside of the Panel, locate the 12V Power Receptacle and 90-Degree 2-Pin Connector.



4. Remove the 90-Degree Connector.



5. Next, remove the Plastic Housing from the Pins.

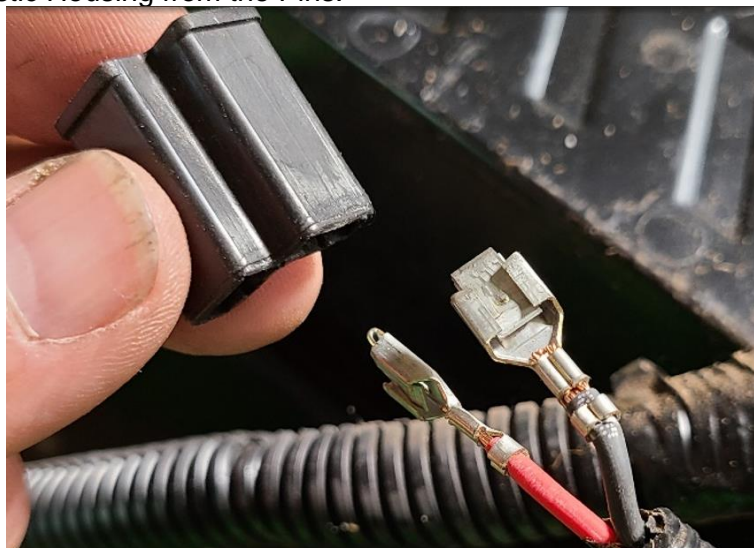

6. With the provided 1-Pin Housings, add a Housing to each Pin.



7. To remove the Receptacle, squeeze the tabs on either side and push through the Panel.





8. Insert the USB42CHD into the Panel and screw on the provided Nut to complete the install onto the Panel. Then attach the individual Pins to the USB42CHD; Red to (+) and Green to (-).



9. Before screwing the Panel into place, test to ensure the USB42CHD is able to charge a Phone and/or Device.

