



BSD Installation Manual

Component


No.	Names of Commodity	Quantity	Photo
1	BSD Main Harness	1PCS	
2	Sensor	2PCS	
3	LED indicator	2PCS	
4	Buzzer	1PCS	
5	GPS box	1PCS	
6	GPS box Harness	1PCS	
7	GPS	1PCS	
8	Cable tie	40PCS	
9	Instruction manual/ Operating instructions	1PCS	
10	M4 screw	4PCS	

1

Note


Please read the installation manual before install. Thanks!

Wiring diagram

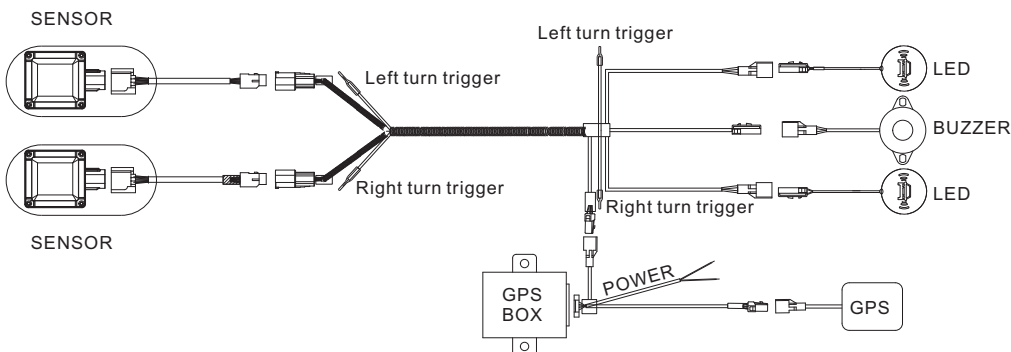

2

Installation Instruction

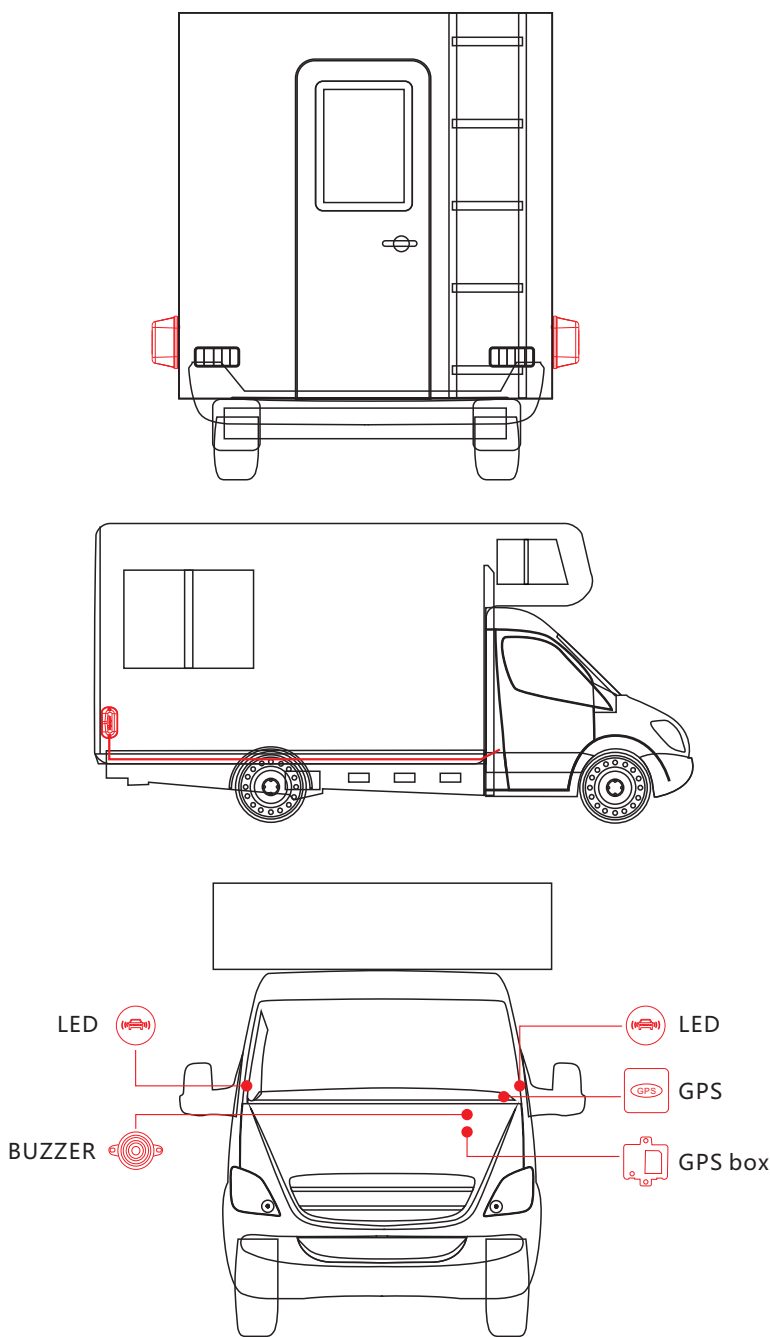


3


Installation procedure

1.Sensor Installation Place :

Sensor Installation height

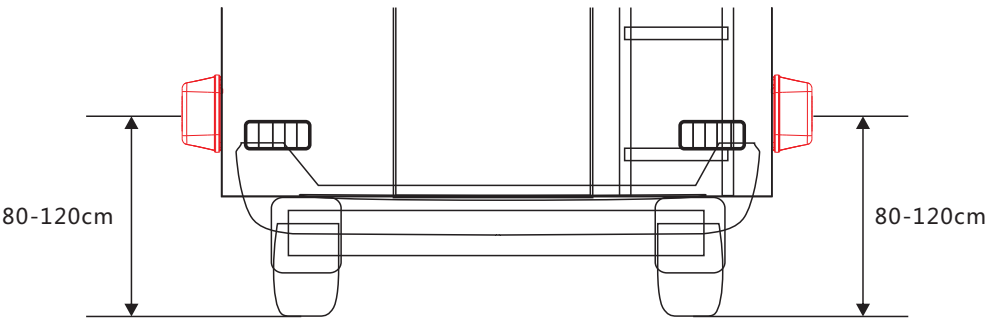


Please install the sensor according to the cover identification. (It marks UP , Left or right)

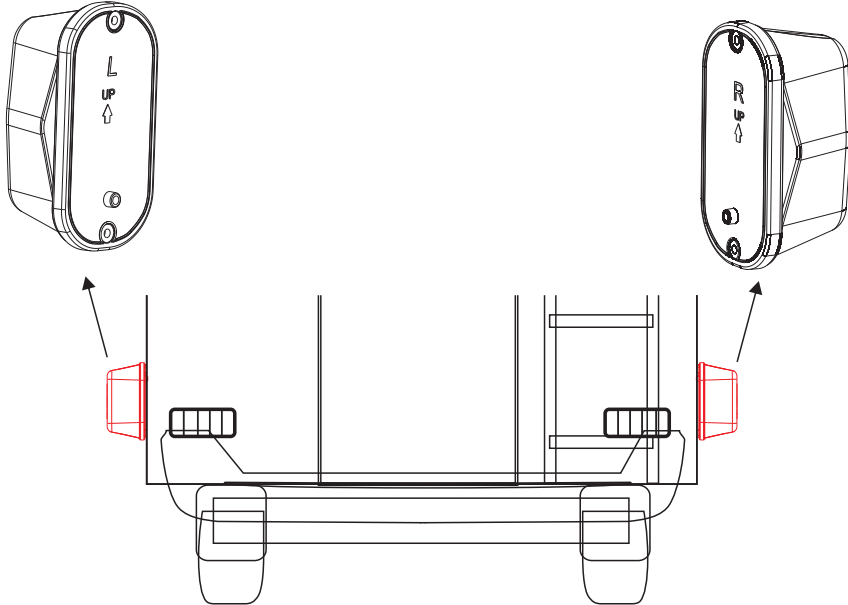


4

Use the Screw to fix the sensor after select the correct installation place.  
Go through the extension harness from the back to Driver side

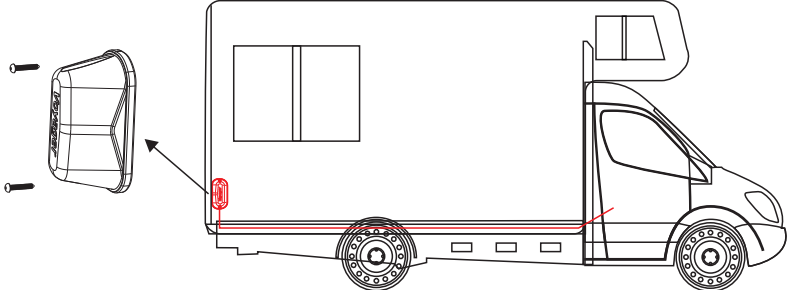

Vertical angle: 150 degree  
Horizontal angle: 80 degree  
Make sure there is no any object around the sensor.

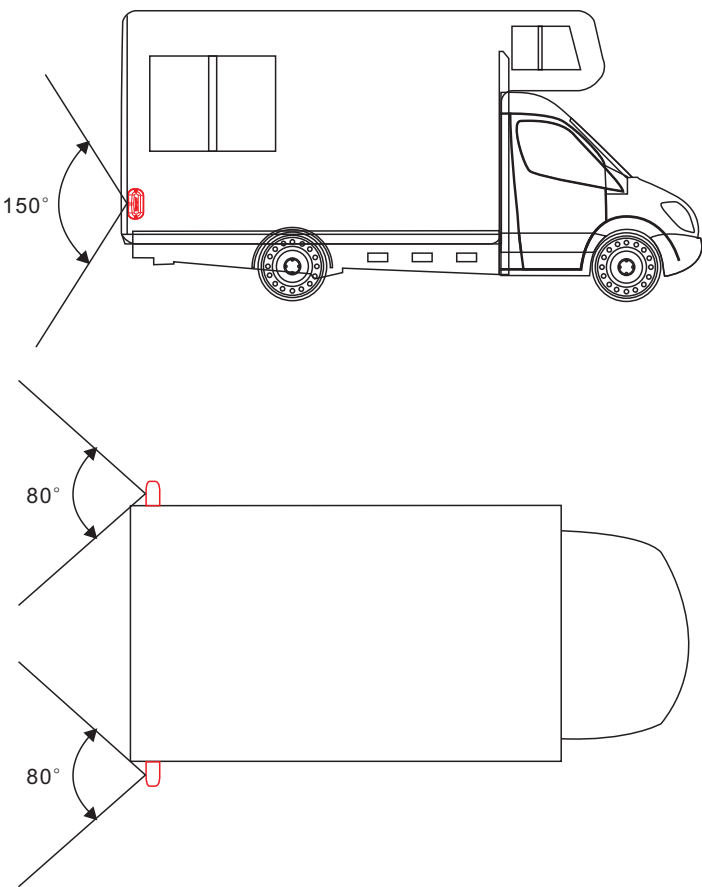

5

Checking

1. After install all the harness, make sure all the connector is connect good.
2. Testing all the function is ok.

6