



HEAVY DUTY

JHD1635BT

QUICK REFERENCE GUIDE

Basic Operation

POWER: Press to turn power ON or OFF.
VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.

AUDIO MENU: Press continually to navigate through the AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), and FADER (front to back). Rotate CLOCKWISE or COUNTERCLOCKWISE to adjust each option.



MODE: Press continually to navigate through the modes: AM/FM, SXM, iPod, BT Audio and AUX.

EQ/LOUD: Press to choose one of the predefined bass and treble curves. Press and hold to turn loudness ON/OFF.

MUTE: Press to MUTE audio.

AUXILIARY/USB INPUT: Insert stereo connector from any portable audio player or USB device.

PTY/CAT MENU: Press & hold to access SYSTEM MENU. Press << or >> to navigate through menu items. Press ENTER to adjust desired menu item.

AM/FM/RBDS/WB

AS/PS: Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.

VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.



BAND: Press to select preset group FM1, FM2, FM3, AM1, or AM2 each with 6 channel memory locations.
WB: Press & hold to listen to WEATHERBAND.

MUTE: Press to MUTE audio.

STATION STORE BUTTONS: Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 30 channels (6 channels per band FM1, FM2, FM3, AM1, AM2).

TUNE/SEEK: Momentarily press >> to tune UP in frequency or << to tune DOWN in frequency. Press & hold to SEEK to next strongest station.

PTY/CAT MENU: Press to enter program type search. Press << or >> to navigate through program types. Press PTY to select desired program type.

SiriusXM™ Satellite Radio

AS/PS: Press to scan through currently stored presets.

DISP/SCROLL: Press to change display info between single and dual line text display. Press & hold to SCROLL Artist & Song Title info.

VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTERCLOCKWISE to DECREASE (-) volume.



BAND: Press to select preset group SXM1, SXM2, or SXM3 each with 6 channel memory locations.

MUTE: Press to MUTE audio.

STATION STORE BUTTONS: Press & hold to store current channel playing. Press once to recall stored channel.

TUNE/SEEK: Press >> to tune UP a channel or << to tune DOWN a channel. Press & hold to fast search.

INFO/ENTER: Press & hold to directly enter station number. Press << or >> to change number. Press again to select desired number.

NOTE: Requires SiriusXM tuner and antenna. Sold separately.

PTY/CAT MENU: Press to enter category list mode. Press CAT- to go DOWN a category or CAT+ to go UP a category. Press << or >> to navigate through category list. Press DISP/SCROLL to navigate through Channel Name, Artist & Song Title information. Press ENTER to select desired song in category.

Bluetooth

INCOMING/OUTGOING PHONE CALL: Press to answer incoming call if Auto answer function is turned off. Press to end call. Press and hold to transfer an incoming call to your cellphone.

MUTE/PLAY/PAUSE: Press to PLAY or PAUSE current track.



TUNE/TRK: Press to play previous or next track.

INFO/ENTER: Press to select "BT ON" or "BT OFF". When BT ON, press to turn BT Pair "ON" to put unit into pairing mode.

PTY/CAT MENU: Press & hold to access SYSTEM MENU. Press << or >> to navigate to Bluetooth Setup Menu option. Press ENTER to select.

PAIRING A BLUETOOTH DEVICE: With radio in BT Audio mode, choose "BT Pair" from radio menu and press ENTER button to prepare for incoming pairing signal from Bluetooth enabled device. When Bluetooth enabled device has completed its search, it will display the name of the radio (JHD1635BT) on the screen. Select "JHD1635BT" on your BT enabled device. The BT icon will appear on the radio LCD.

USB Function

VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTER-CLOCKWISE to DECREASE (-) volume.

MUTE/PLAY/PAUSE: Press to PLAY or PAUSE current audio.

RPT: Press to REPEAT current playing track. Press to release function.

INTRO SCAN: Press when album/folder is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

RDM: Press when album/folder is playing to play each track in RANDOM order. Press again for NORMAL play.

USB: Insert USB device here or through rear USB input.



TUNE/TRK: Press to tune to next or previous track. Press & hold to FAST FORWARD or REWIND current track playing. Release for normal playback.

PTY/CAT MENU: Press to access folder list. Press << or >> to navigate through folder. Press ENTER to select desired folder. Press << or >> to navigate through songs. Press ENTER to select desired song.

iPod Controls

VOLUME: Rotate CLOCKWISE to INCREASE (+) volume. Rotate COUNTER-CLOCKWISE to DECREASE (-) volume.

DISP/SCROLL: Press to change display info between single and dual line text display. Press and hold to SCROLL Artist and Song Title info.

MUTE/PLAY/PAUSE: Press to PLAY or PAUSE current audio.

RPT: Press to REPEAT current playing track. Press to release function.

INTRO SCAN: Press when iPod is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

RDM: Press when iPod is playing to play each track in RANDOM order. Press again for NORMAL play.



TUNE/TRK: Press to tune to next or previous track. Press & hold to FAST FORWARD or REWIND current track playing. Release for normal playback.

PTY/CAT MENU: Press to enter playlist selection mode. Press << or >> to navigate through Playlists, Artists, Albums, Genres, Songs, Audiobooks & Podcasts. Press ENTER to select desired item. Press << or >> to navigate through selected item folder. Press ENTER to select desired song.

Clock Settings



PTY/CAT MENU: Press & hold to enter menu. Press << or >> to navigate to SET CLOCK. Press ENTER to select. Press << or >> to adjust the HOUR. Press ENTER to move to the MINUTES. Press << or >> to adjust the MINUTES. Press ENTER to set the clock.

For owner's manual, please visit:
<http://www.aselectronics.com/manuals-guides>
 or scan this QR code.



Activating your SiriusXM® Subscription — Before you can listen to SiriusXM Satellite Radio, you must subscribe to the service and purchase an optional SiriusXM Connect Tuner.

1. With the radio power ON, press the MODE button to enter SiriusXM Ready mode. After displaying the SiriusXM logo, the Receiver may update the SiriusXM software.
 NOTE: Don't press any buttons or perform any operations until updating has been completed.
2. Once the update is complete, the display will change to "Call 1-866-635.2349 to Subscribe" and will show the Preview Channel on channel 1. You will not be able to tune to any other SiriusXM Radio channels until you activate your subscription.

3. You will need to access your SiriusXM Radio ID, which is displayed on channel 000. Press and hold the INFO/ENTER button on the radio to enter Direct Tuning mode. Press << or >> to select digits 000. Press ENTER to make your selection. This will display your unit's unique 8-digit Sirius Radio ID.
 4. Write the Radio ID number down and have your credit card handy.
 5. To Activate a SiriusXM subscription, go to www.siriusxm.com/activatenow or call 1-866-635-2349.
- To activate SiriusXM Canada service go to www.xmradio.ca and click on "ACTIVATE RADIO" in the top right corner, or call 1-877-438-9677.