



GPS SIGNAL: Indicates the current GPS satellite signal strength.

DESTINATION: Tap to search for or enter a destination and begin navigating.

ROUTE OPTIONS: Tap to adjust navigation options such as avoidances.

MORE: Tap to access features like Fuel Consumption, Trip Monitor, etc.

NAV: Press to open the navigation app from inside any app.

SHOW MAP: Tap to show the map and navigation route full screen.

NAVIGATION SETTINGS: Tap to open up the navigation settings screen.


NAVIGATION CLOSE: Tap to stop navigating and close the navigation app.



ACCESSING CLOCK SETTINGS: On the second page of the home screen, tap the Settings icon. Then tap Time.

ADJUSTING TIME & DATE: Tap the arrows above or below the current set time and date. Tap the checkmark to confirm the desired time settings.

12HR/24HR TOGGLE: Adjust the toggle to switch between 12HR and 24HR display.

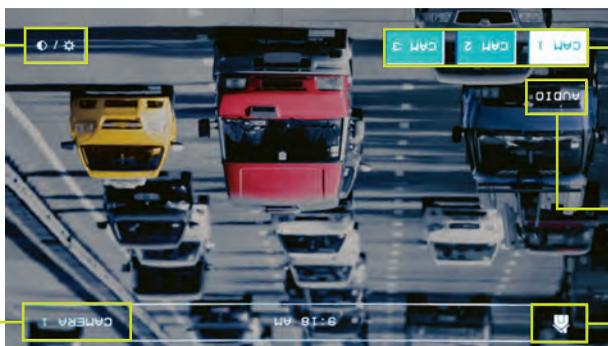

CAMERA SETTINGS: Tap to adjust camera BRIGHTNESS and CONTRAST.

Current Camera being Displayed

HOME: Tap to return to the main menu screen.

AUDIO: Tap to toggle between current playing source and camera audio.

CAMERAS: Tap to select a camera.



DESIGNED TO MOVE [YOU][®]

JRV215N

QUICK REFERENCE GUIDE

MENU: Press from inside any app to return to the main menu. Press and hold to toggle between Day and Night dimmer settings.

NAV: Press to switch between navigation app and current audio source app view.


POWER: Press to turn ON. Press and hold to turn OFF. While on, momentary press to activate MUTE. **VOL:** Rotate to adjust volume output.

APP MENU SCREEN: Tap any icon to open that app. Swipe from right to left, or touch dot at bottom of screen, to go to second menu page.

USB/AUX-IN: Connect a USB flash drive, Apple iPod, or 1/8" AUX cable for audio playback.



EJECT: Press to EJECT CD.

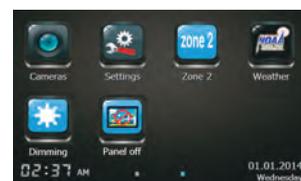

MAIN MENU: PAGE 2

ZONE 2: Select to control zone 2 audio/video output.

PANEL OFF: Turns display OFF while leaving the audio ON.

DIMMING: Adjust the display brightness.

HOME: Tap to return to the main menu screen.

Current Radio Station

Current Band/Preset

SAVE: Tap to store the currently tuned channel to a preset location.

AS/PS (Auto Scan/Preset Scan): Tap to SCAN through currently stored Presets. Touch and hold to store strongest stations in your area.

TUNNING <->: Tap to tune the station up or down.



PTY SEARCH: Tap to view the list of program type categories. Select a category and then tap search.

PRESET BANK: Tap to tune to the indicated preset channel.

AUDIO SETTINGS: Tap the mixer icon to bring up and adjust the audio settings menu.

LOC/DX: Tap to switch between local and distance radio tuning.

FM/AM: Tap to change the current FM/AM band (FM1, FM2, FM3, AM1, AM2)

HOME: Tap to return to the main menu screen.

PAIRING: Tap to initiate pairing mode. Search for a Bluetooth signal using your handheld device and connect using the indicated PIN.

DISCONNECT: Tap to force the JRV215N to disconnect from the currently connected device.

PHONEBOOK SYNC: Tap to sync your device phonebook with the JRV215N to enable easier hands-free function.

NUMBER PAD: Tap to dial and call out via the connected device.



RECENT CALLS: Tap to view recent incoming, outgoing, and missed calls.

PHONEBOOK: Tap to view the synced contact list and make a call to a listed contact.

AUTOCONN: Tap to toggle automatic connection ON/OFF. When ON, the JRV215N will automatically try to connect to the last paired device on startup.

AUTOANSWER: Tap to toggle automatic call answering ON/OFF. When ON, the JRV215N will automatically answer any incoming call.

PAIRING LIST: Tap to see list of paired devices. Tap the device to connect to it or tap delete to remove it from the pairing list.

AUDIO SETTINGS: Tap the mixer icon to bring up and adjust the audio settings menu.

BLUETOOTH SETTINGS: View and make changes in the Bluetooth settings menu.

BLUETOOTH AUDIO: Tap the Bluetooth Audio icon to control audio playback (tracks <->, Play/Pause) and view ID3 information.

HOME: Tap to return to the main menu screen.

Currently Tuned Channel: Shows the current channel.

SAVE: Tap to store the currently tuned channel to a preset location.

PS (PRESET SCAN): Tap to SCAN through currently stored Presets.

DIRECT TUNING: Tap the number pad icon to bring up a number pad for quick tuning to any channel.



CHANNEL TUNE <->: Tap to tune the channel up or down.

AUDIO SETTINGS: Tap the mixer icon to bring up and adjust the audio settings menu.

Signal Strength Indicator: Shows the current signal strength.

SiriusXM Tabs:

TUNE: Shows the currently tuned channel.

CHANNEL: Tap to access the Channel browse menu. View the list of channels while remaining tuned to the current channel.

CATEGORY: Tap to access the Category browse menu. View channels by category while remaining tuned to the current channel.

PRESET: Tap to view the Preset list and choose a preset channel to tune to.

LOCK: Tap to access the Parental Lock settings and require a password for locked channels.

CHG PW: Tap to change the Parental Lock Password.

Note: Requires SiriusXM tuner, antenna and subscription (all sold separately).


HOME: Tap to return to the main menu screen.

Current Playing Track File Name: Shows the title of the current track.

Current Playing Track ID3 Info: Shows artist and album information.

SHUFFLE: Tap the shuffle icon to toggle shuffle function on/off.

REPEAT: Tap the repeat icon to toggle repeat mode on/off.

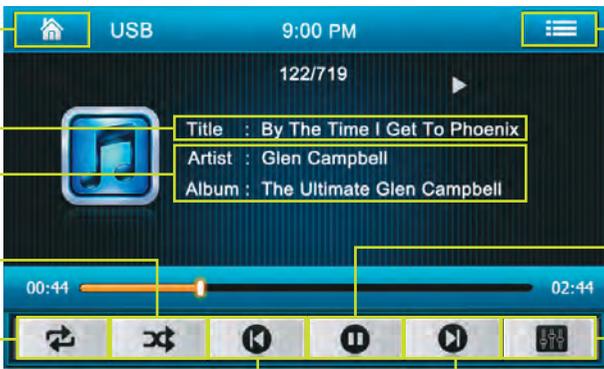

TRACK <->: Tap to tune to the previous or next track.

FOLDER SEARCH: Tap to view and navigate folders (USB) or playlists (iPod) on the device and select tracks for playback.

PAUSE: Tap to PAUSE the current playing track. Tap again to resume play.

AUDIO SETTINGS: Tap the mixer icon to bring up and adjust the audio settings menu.


HOME: Tap to return to the main menu screen.

Current Playing Track File Name: Shows the title of the current track.

Current Playing Track ID3 Info: Shows artist and album information.

SHUFFLE: Tap to toggle shuffle function ON/OFF.

REPEAT: Tap to toggle repeat function ON/OFF.

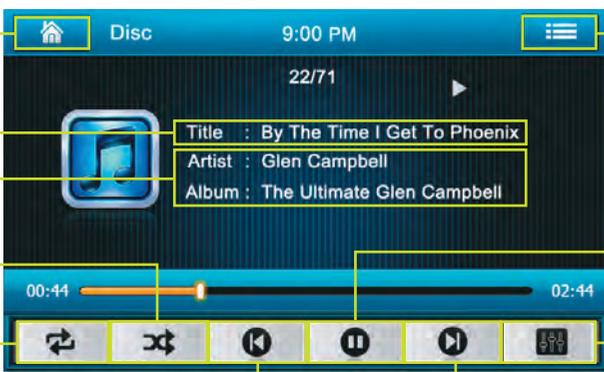

TRACK <->: Tap to tune to the previous or next track.

FOLDER SEARCH: Tap to view and navigate folders on the device and select tracks for playback.

PAUSE: Tap to PAUSE the current playing track. Tap again to resume play.

AUDIO SETTINGS: Tap the mixer icon to bring up and adjust the audio settings menu.

For owner's manual, please visit <http://www.asaelectronics.com/manuals-guides> or scan this QR code.



Activating your SiriusXM® subscription (Purchase of subscription, SiriusXM connect tuner and antenna required).

1. With the radio power ON, tap the SiriusXM button to enter SiriusXM mode. After displaying the SiriusXM logo the receiver may update the software.
NOTE: Don't press any buttons or perform any operations until updating has been completed.
2. Once the update is complete, the display will change to "Call 1-866-635.2349 to Subscribe" and will show the Preview Channel on channel 1. You will not be able to tune to any other SiriusXM Radio channels until you activate your subscription.

3. You will need to access your SiriusXM Radio ID, which is displayed on Channel 0. Tap the direct tuning number pad icon to enter direct tuning mode. Tap "000" then the "checkmark" to tune to Channel 0. This will display your unit's unique 8-digit SiriusXM Radio ID.
 4. Write the Radio ID number down and have your credit card handy.
 5. To Activate a SiriusXM subscription, go to www.siriusxm.com/activatenow or call 1-866-635-2349.
- To activate SiriusXM Canada service go to www.xradio.ca and click on "ACTIVATE RADIO" in the top right corner, or call 1-877-438-9677.