



DESIGNED TO MOVE [YOU][®]

JWM990

QUICK REFERENCE GUIDE

Basic Operation

POWER: Press to power the unit ON/OFF.

BRIGHT (+/-): Press + to increase the brightness and - to lower the brightness (Off, 1, 2, 3, 4).

SOURCE: Press to cycle through available modes (Bluetooth, Front AUX, Rear AUX, Coaxial, Optical, Radio, Weatherband, Disc, USB).



VOLUME KNOB: Rotate to adjust volume level or to navigate through menu options.

MENU: Press for Audio Menu, then press |◀◀| or ▶▶| to cycle through the menu options (Bass, Treble, Balance, Fade, EQ, Loud, Repeat, Repeat All). Press and hold for System Menu, then press |◀◀| or ▶▶| to cycle through the menu options (Beep, RCA Output, Weatherband Alert, Weatherband Alert Volume, Low Battery Alert, Bluetooth, Preset Volume, Reset). Rotate volume knob to adjust.

SPEAKER OUTPUT ZONES: Press any button (A, B, C) to select speaker zone output.

USB: Connect a USB flash drive for audio playback.
AUX IN: Insert 3.5mm audio jack.

AM/FM Tuner Controls

CHANGE BANDS: To change between bands (FM1, FM2, FM3, AM1, AM2), press SOURCE until "Radio" is displayed, then press ENTER to select. When current BAND is displayed, press SOURCE to cycle through available bands and press ENTER to select.

SOURCE: Press to cycle through available modes (Bluetooth, Front AUX, Rear AUX, Coaxial, Optical, Radio, Weatherband, Disc, USB). When "Radio" is reached, press ENTER to select.



TUNE/SEEK: Press to tune to previous (◀◀) or next (▶▶) station, press and hold to seek the next strongest station.

ASPS: Press and hold to save the 18 strongest stations in your area. Press once to automatically scan through the stored channels.

PRESETS 1-6: Press and hold to save the current station to the selected preset. Press again to recall preset station.

Weatherband Tuner Control

SOURCE: Press to cycle through available modes (Bluetooth, Front AUX, Rear AUX, Coaxial, Optical, Radio, Weatherband, Disc, USB). When "Weatherband" is reached, press ENTER to select.



TUNE/SEEK: Press to tune to previous (◀◀) or next (▶▶) station, press and hold to seek the next strongest station.

PRESETS 1-6: Press to recall preset Weatherband station.

CD/DVD Player Controls

▶▶|: Press to begin playback.

EJECT: Press to eject the disc.

SOURCE: Press to cycle through available modes (Bluetooth, Front AUX, Rear AUX, Coaxial, Optical, Radio, Weatherband, Disc, USB). When "Disc" is reached, press ENTER to select.



PREV TRACK: Press once to go back to the beginning of current track, twice to play the previous track, or press and hold to fast reverse seek through the track.

NEXT TRACK: Press to play next track. Press and hold to fast forward seek through the track.

INTRO SCAN: Press to play each track for 10 seconds in sequential order, and again to toggle off and play current track.

RANDOM: Press to play all tracks in random order, and again for normal playback.

REPEAT: Press consecutively to toggle repeat (one, directory, all) playback of tracks.

STOP: Press to stop playback.

DVD MENU: Press to go to the DVD Menu screen.

LANGUAGE: Press to change the audio language during DVD playback.

Bluetooth Operation



PREV TRACK: Press once to go back to the beginning of the track, and twice to play the previous track.

NEXT TRACK: Press to play the next track.

SOURCE: Press to cycle through available modes (Bluetooth, Front AUX, Rear AUX, Coaxial, Optical, Radio, Weatherband, Disc, USB). When "Bluetooth" is reached, press **ENTER** to select.

PAIR BLUETOOTH DEVICE: While in Bluetooth mode, press & hold to display system menu, press **||** or **||** until Bluetooth Pair is displayed, then press **ENTER**. The JWM990 will be discoverable for 120 seconds; search for Bluetooth devices using your mobile device, connect to JWM990 when found. Enter the pairing password (0000), if requested.

USB Playback



PREV TRACK: Press once to go back to play the previous track; press and hold to fast reverse seek through the track. In folder view press to move up in the file list.

NEXT TRACK: Press to play the next track, press and hold to fast forward seek through the track. In folder view press to move down in the file list.

SOURCE: Press to cycle through available modes (Bluetooth, Front AUX, Rear AUX, Coaxial, Optical, Radio, Weatherband, Disc, USB). When "USB" is reached, press **ENTER** to select.

RANDOM: Press to play all tracks in random order, press again for normal playback

REPEAT: Press consecutively to toggle repeat (one, directory, all) playback of tracks

STOP: Press to stop playback.

FOLDER UP: Press to move up in the folder list.

FOLDER DOWN: Press to move down in the folder list.

iPhone/iPod Playback



PREV TRACK: Press once to go back to the beginning of current track, twice to play the previous track, or press and hold to fast reverse seek through the track.

NEXT TRACK: Press to play next track. Press and hold to fast forward seek through the track.

SOURCE: Press to cycle through available modes (Bluetooth, Front AUX, Rear AUX, Coaxial, Optical, Radio, Weatherband, Disc, USB). When "USB" is reached, press **ENTER** to select.

RANDOM: Press to play all tracks in random order, and press again for normal playback.

REPEAT: Press consecutively to toggle repeat (one, directory, all) playback of tracks.

STOP: Press to stop playback.

IPOD MENU: Press to enter the iPod menu. Use **||** and **||** to move up and down in the menu and press **ENTER** to make a selection. Pressing 5/DVD MENU will reverse navigate through the menu.

Clock Controls



CLOCK (H, M): Press and hold H or M until the clock begins flashing, then press H to adjust the indicated hour and M to adjust the indicated minute.

ALARM (SET): Press and hold until the clock begins flashing, then press the H, M keys to adjust the alarm time setting. Press **ENTER** to confirm. Press to engage sleep timer (0, 15, 30, 45, 60).

ALARM (ON/OFF): Press to toggle ON/OFF.

For owner's manual, please visit <http://www.asaelectronics.com/manuals-guides> or scan this QR code.

