



DESIGNED TO MOVE [YOU][®]

JWM9A

QUICK REFERENCE GUIDE

Basic Operation

POWER: Press to power the unit ON or OFF.

BRIGHT (+/-): Press + to increase the brightness and - to decrease the brightness (Off, 1, 2, 3, 4).

SOURCE: Press to cycle through available modes (Bluetooth[®], Front AUX, Rear AUX, Coaxial, Optical, Radio, HDMI ARC, Weatherband, Disc, USB).

VOLUME KNOB: Rotate to adjust volume level or to navigate through menu options.

MENU: Press for Audio Menu, then press |◀◀ or ▶▶| to cycle through the menu options (Bass, Treble, Balance, Fade, Loud, EQ). Rotate volume knob to adjust. Press and hold for System Menu, then press |◀◀ or ▶▶| to cycle through menu options (Beep, RCA Output, Region, Weatherband Alert, Weatherband Alert Volume, Low Battery Alert, Bluetooth Device, Preset Volume, Reset). Rotate volume knob to adjust.

SPEAKER OUTPUT ZONES: Press any button (A, B, C) to select that speaker zone for audio output.

USB: Connect a USB flash drive for audio playback or compatible media device for charging.

AUX-IN: Insert 3.5 mm audio jack.

App Control

App download and operation: jControl app controls all of the primary functions of the JWM9A directly from your phone or tablet. It can be downloaded from the App Store on iTunes for Apple devices, or the Google Play Store for Android devices, and found by searching for *jControl*.

After downloading and installing the app, pair your device to the JWM9A as instructed in the Bluetooth Operation section in this guide. Once your device is paired, open the app and use as instructed. (Device must be paired to JWM9A before the app can be used).

Smartphone Interface

Mode Menu

Back

Volume Down

Power

Audio Menu

Forward

Volume Up

Mode Menu

App Info

Play/Pause/Mute

Tablet Interface

Whip It

Devo

39/2488

Disc

AM

FM

Weather

Bluetooth

USB 1

Auxiliary 1

Auxiliary 2

Coaxial

Intro

Random

Repeat

My Music Folder #5

Audio

Video

Photo

blondie-call_me.mp3

bob_marley-no_woman_no_cry_(live).mp3

devo-whip_it.mp3

the_cars-let_the_good_times_roll.mp3

the_cure-pictures_of_you.mp3

Page 4/7

Entire jControl app owner's manual can be found at <http://asaelectronics.com/manuals-guides>.

AM/FM Tuner Controls

CHANGE BANDS: To change between bands (FM1, FM2, FM3, AM1, AM2), press until *Radio* is displayed, then press ENTER to select. When current BAND is displayed, press SOURCE to cycle through available bands and press ENTER to select.

TUNE/SEEK: Press to tune to previous |◀◀ or next ▶▶| station, press and hold to seek the next strongest station.

ASPS: Press and hold to save the 18 strongest stations in your area. Press once to automatically scan through the stored channels.

PRESETS 1-6: Press and hold to save the current station to the selected preset. Press again to recall preset station.

SOURCE: Press repeatedly to cycle through available modes until *Radio* is reached, and press ENTER to select.

CD/DVD Player Controls

PREV TRACK: Press once to go back to the beginning of current track, twice to play the previous track, or press and hold to fast reverse seek through the track.

NEXT TRACK: Press to play next track. Press and hold to fast forward seek through the track.

INTRO SCAN: Press to play each track for 10 seconds in sequential order, and again to toggle off and play current track.

RANDOM: Press to play all tracks in random order, and again for normal playback.

REPEAT: Press consecutively to toggle repeat (one, directory, all) playback of tracks.

STOP: Press to stop playback.

DVD MENU: Press to go to the DVD Menu screen.

LANGUAGE: Press to change the audio language during DVD playback.

▶▶|: Press to begin playback.

EJECT: Press to eject the disc.

SOURCE: Press repeatedly to cycle through available modes until *Disc* is reached, and press ENTER to select.

Bluetooth® Operation



▶||: Press to pause/resume.

PREV TRACK: Press once to go back to the beginning of the track, and twice to play the previous track.

NEXT TRACK: Press to play the next track.

SOURCE: Press repeatedly to cycle through available modes until *Bluetooth* is reached, and press ENTER to select.

PAIR DEVICE VIA BLUETOOTH: (Make sure the device you intend to pair with is on and Bluetooth is enabled.) While in Bluetooth mode, press and hold ENTER for 3 seconds to start the process. The JWM9A will then display *Pairing* and be able to be paired with for 120 seconds. With your device in Bluetooth settings, *JWM9A* should appear as an available device. Tap *JWM9A* to connect. Enter the pairing password (0000), if requested. The BT AUDIO icon (🎵) will then be displayed.

USB Playback



▶||: Press to pause/resume.

PREV TRACK: Press once to go back to play the previous track; press and hold to fast reverse seek through the track. In folder view, press to move up in the file list.

NEXT TRACK: Press to play the next track, press and hold to fast forward seek through the track. In folder view, press to move down in the file list.

SOURCE: Press repeatedly to cycle through available modes until *USB* is reached, and press ENTER to select.

RANDOM: Press to play all tracks in random order. Press again for normal playback

REPEAT: Press consecutively to toggle repeat (one, directory, all) playback of tracks

STOP: Press to stop playback.

FOLDER DOWN: Press to move down in the folder list.

FOLDER UP: Press to move up in the folder list.

Weatherband Tuner Control



TUNE/SEEK: Press to tune to previous ◀◀ or next ▶▶ station, press and hold to seek the next strongest station.

SOURCE: Press repeatedly to cycle through available modes until *Weatherband* is reached, and press ENTER to select.

PRESETS 1-6: Press to recall preset Weatherband station.

For owner's manual, please visit <http://www.asaelectronics.com/manuals-guides> or scan this QR code.

