

Clock Settings



CLOCK SETTINGS: On page two of the source menu screen, tap the Settings icon. Then next to 'Clock', tap either the hours or minutes and then the + or - icons to adjust up or down.

Pandora



PANDORA: Displays current app or mode. Tap to return to SOURCE MENU screen.

Current Station/Song/Album/Artist Information

Elapsed Time Indicator: Displays the elapsed and total playing time of the current track playing.

LIST: Tap to display the Playlist screen.

BOOKMARK: Tap to display BOOKMARK submenu to bookmark new song/artist.

PLAY/PAUSE: Tap to PAUSE the current playing track. Tap again to resume play.

LIKE/DISLIKE: Tap to LIKE or DISLIKE the current track being played.

TRACK: Tap to advance to the next track.

iPod: Tap to access iPod mode.



DESIGNED TO MOVE [YOU][®]

VM9226BT

QUICK REFERENCE GUIDE

Basic Operation

EJECT: Press to EJECT CD.

SRC: Press to access SOURCE MENU.

NAV: Navigation-ready with the addition of an optional module.

POWER: Press to turn ON. While on, momentary press to activate MUTE. Press again to restore volume. Press and hold to turn OFF.


VOL: Rotate to adjust volume output.

USB/SD/AUX-IN: Connect a USB device, an SD card, or 1/8" AUX cable for audio/video file playback.



MAP COVER: Cover for the mini SD card slot.

SOURCE MENU SCREEN: Tap any app icon to open that app. Tap NEXT to access second menu screen or PREVIOUS to return to first screen.

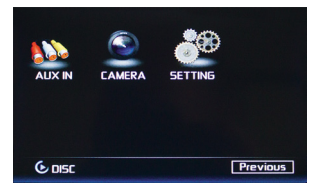

SOURCE MENU: PAGE 2

AUX IN: Tap to access auxiliary devices that are connected.

SETTINGS: Tap to access settings menu.

AM/FM/RBDS/WB


RADIO: Displays current app or mode. Tap to return to SOURCE MENU screen.

Current Band/Preset

PRESET BANK: Tap to tune to the indicated preset channel.

DIRECT ENTRY: Directly enter desired station.

FM/AM: Tap to change the current FM/AM band (FM1, FM2, FM3, AM1, AM2).

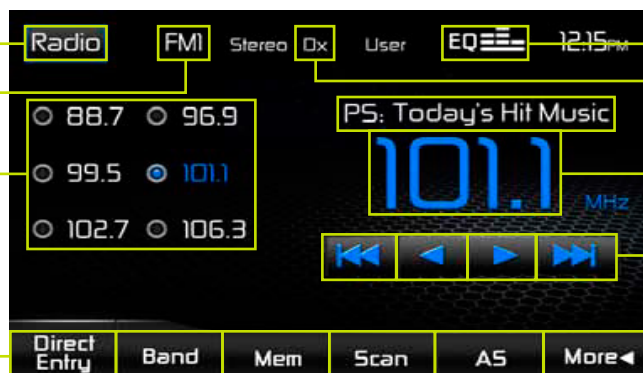

MEM: Tap to access the preset screen and save the current station to memory.

SCAN: Tap to SCAN all available stations in your area.

EQ: Tap to adjust equalizer settings.

Dx/LOC: Tap to switch between distance and local tuning.

Current Station

TUNNING: Touch >> to seek forward and << to seek backwards. Tap > to tune forward one step and < to tune backward one step.

MORE: Tap for additional options (see manual).

AS: Tap to automatically scan and store strongest stations.

Bluetooth


BT: Displays current app or mode. Tap to return to SOURCE MENU screen.

PAIRED DEVICE: Displays device that unit is currently paired with.

PHONE: Tap to access phone call menu.

RETURN: Tap to return to previous menu.

PAIRING: While in Bluetooth mode, tap the OPTIONS tab and switch the Bluetooth and Connect functions to ON. Then tap "Pair" back on the main Bluetooth screen. Search for the Bluetooth signal with your device and connect once found. A prompt to enter a PIN number or passkey for the unit, which is "1234", should appear.

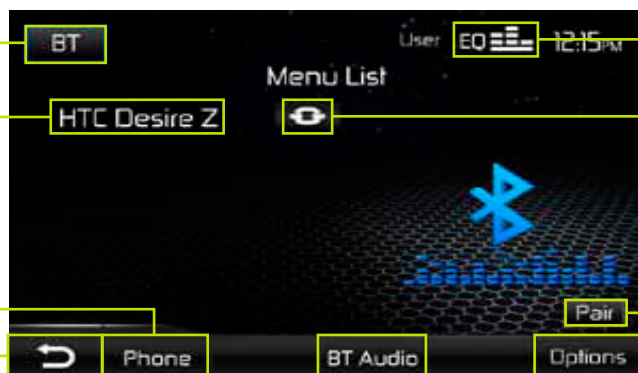

BLUETOOTH AUDIO: Tap to access Bluetooth music function.

EQ: Tap to adjust equalizer settings.

PAIRING: Indicates whether or not the unit is connected to another device.

PAIRING: Tap to initiate pairing mode. Use your device to search for the unit's Bluetooth signal and connect using the indicated PIN.

OPTIONS: Tap to configure Bluetooth parameters and options.

SiriusXM™ Satellite Radio


SXM: Displays current app or mode. Tap to return to SOURCE MENU screen.

PRESET BANK: Tap to tune to the indicated preset channel.

Current Station

DIRECT TUNING: Tap the number pad icon to bring up a number pad for quick tuning to any channel.

LIST: Tap to access either the Category screen or Channel screen.

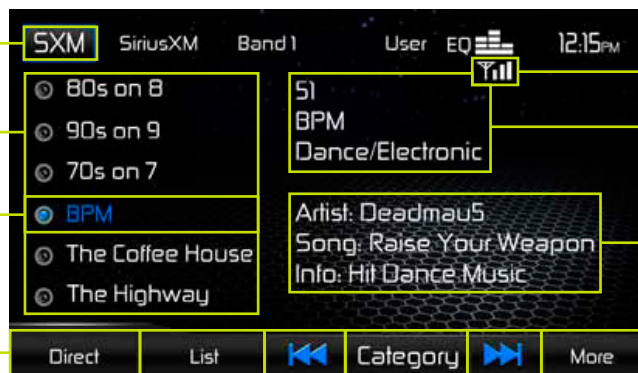

CATEGORY: Tap to access menu. View channels by category while remaining tuned to the current channel.

Signal Strength Indicator

Current Station Number, Name and Genre

Current Artist/Song/Category Information

MORE: Tap to access page 2 of menu.

TUNING: Tap >>1 to tune forward one channel and << to tune backward one channel.

Note: Requires SiriusXM tuner, antenna and subscription (all sold separately).

USB/iPod Playback


iPod: Displays current app or mode. Tap to return to SOURCE MENU screen.

Current Song/Artist/Album Information

Elapsed Time Indicator: Displays the elapsed and total playing time of the current track playing.

RETURN: Tap to return to previous menu.

PLAY/PAUSE: Tap to PAUSE the current playing track. Tap again to resume play.

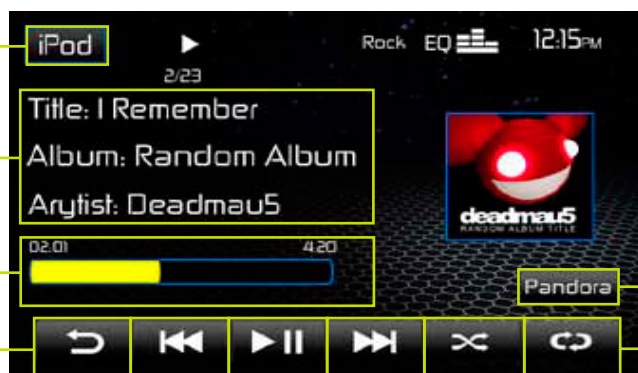

AUDIO SETTINGS: Tap the mixer icon to bring up and adjust the audio settings menu.

PANDORA: Tap to access Pandora mode.

REPEAT: Tap to play the current track repeatedly.

RANDOM: Tap to play songs randomly.

TRACK: Tap to advance to the previous or next track.

DISK/Audio & Video Playback


DISK: Displays current app or mode. Tap to return to SOURCE MENU screen.

Current Song/Artist/Album Information

Elapsed Time Indicator: Displays the elapsed and total playing time of the current track playing.

LIST: Tap to display the Playlist screen.

PLAY/PAUSE: Tap to PAUSE the current playing track. Tap again to resume play.

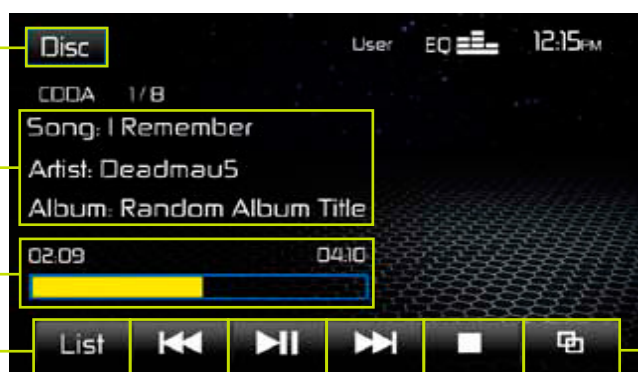

TOGGLE: Tap to toggle between page 1 and 2 of the menu.

STOP: Tap to STOP playback.

TRACK: Tap to advance to the previous or next track.

For owner's manual, please visit <http://www.asaelectronics.com/manuals-guides> or scan this QR code.



Activating your SiriusXM® subscription (Purchase of subscription, SiriusXM connect tuner and antenna required).

1. With the radio power ON, tap the SiriusXM button to enter SiriusXM mode. After displaying the SiriusXM logo the receiver may update the software.
NOTE: Don't press any buttons or perform any operations until updating has been completed.
2. Once the update is complete, the display will change to "Call 1-866-635.2349 to Subscribe" and will show the Preview Channel on channel 1. You will not be able to tune to any other SiriusXM Radio channels until you activate your subscription.

3. You will need to access your SiriusXM Radio ID, which is displayed on Channel 0. Tap the direct tuning number pad icon to enter direct tuning mode. Tap "000" then the 'checkmark' to tune to Channel 0. This will display your unit's unique 8-digit SiriusXM Radio ID.
 4. Write the Radio ID number down and have your credit card handy.
 5. To Activate a SiriusXM subscription, go to www.siriusxm.com/activatenow or call 1-866-635-2349.
- To activate SiriusXM Canada service go to www.xmradio.ca and click on "ACTIVATE RADIO" in the top right corner, or call 1-877-438-9677.