



DESIGNED TO MOVE [YOU][®]

JMS4

QUICK REFERENCE GUIDE

Basic Operation

AM: Press to change the source to AM radio mode.

FM: Press to change the source to FM radio mode.

WX: Press to change the source to WEATHER BAND radio mode.

BT: Press to change the source to BLUETOOTH mode.


USB: Press to change the source to USB mode.

AUX: Press to change the source to AUX mode.

POWER: Press to turn ON or OFF.

DIMMER: Press to switch the DIMMER ON or OFF.

Hold to bring up brightness setting. Press ◀▶ or ▶▶ to adjust the dimming level (Off, 1, 2, 3, 4, 5, 6, 7, 8)

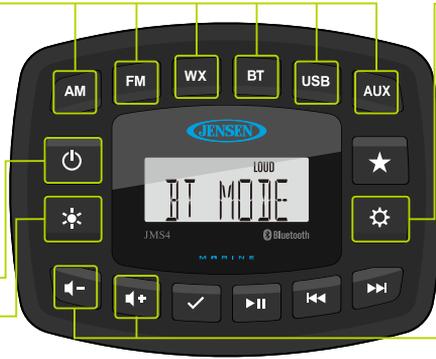

AUDIO/SETTINGS: Press to bring up AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), FADE (front to rear), & Loudness (ON/OFF). Hold to bring up SETTING MENU options: BLUETOOTH Device List, BLUETOOTH PAIR, DIMMING (ON/OFF), DIMMING LEVEL, REGION (USA/EURO), PRESET VOLUME and RESET. Press ◀▶ and ▶▶ buttons to select each SETTING option except 'RESET'.

VOLUME: Press the VOLUME UP ◀+ button to increase volume. Press the VOLUME DOWN ▶- button to decrease volume.

AM/FM Tuner Controls

FM: Press to change the source to FM radio mode.

AM: Press to change the source to AM radio mode.

AS/PS: Hold AM button when in AM radio mode or hold the FM button when in FM radio mode to access Tuner option menu, press again to cycle through AUTO STORE & PRESET SCAN and Press ✓ to select.

AUTO STORE: Store strongest broadcast station in your area.

PRESET SCAN: Scan through currently stored presets.

VOLUME: Press the VOLUME UP ◀+ button to increase volume. Press the VOLUME DOWN ▶- button to decrease volume.



STATION STORE PRESETS: Press to cycle through 12 presets channel. Press and hold to access presets store menu, press repeated cycles through 1-12 preset channels, when desired preset slot is selected, press ✓ to store current channel. NOTE: Up to 12 FM & 12 AM channel can be stored.

TUNER/SEEK/TRACK: Press ▶▶ button to tune frequency higher. Press ◀▶ button to tune frequency lower. Press and hold to scan to next strongest station.

MUTE: Press to MUTE volume. Press again to resume volume.

USB Playback

TUNER/SEEK/TRACK: Press ▶▶ button to advance to NEXT TRACK. Press ◀▶ button to advance to PREVIOUS TRACK. Press & Hold to fast forward/reverse seek through the track.

PLAY/PAUSE: Press to PAUSE or RESUME current audio.



USB: Press to change source to USB mode.

PLAYBACK MENU: Press to select Repeat One, Repeat All and Random playback.

TRACK SELECT: Press and hold to access track select mode, and press the ◀+ or ▶- to select desire track and press ✓ to confirm select.

Bluetooth Operation

ANSWERING PHONE: BT audio will automatically pause when a call is answered. It will then resume once call has ended. In some cases, it may be necessary to press the play button to resume the BT audio.

PLAY/PAUSE: Press to PAUSE or RESUME current audio.

TUNER/SEEK/TRACK: Advance or reverse tracks on your device.



PAIR DEVICE VIA BLUETOOTH:

Make sure the device you intend to pair with is on and Bluetooth is enabled.

1. Press to enter BLUETOOTH mode.
2. Press & hold to start the pairing process. The display will show 'PAIR' and be able to be paired with for 120 seconds.
3. In your device Bluetooth settings, 'JMS4' should appear as an available device. Tap 'JMS4' to connect.

SETTINGS: Press & hold to navigate through menu options; Press ✓ to select BT Device LIST or PAIR.

Weatherband Tuner Control

WX: Press to change the source to WEATHERBAND radio mode display as WB frequency.

TUNE/SEEK: Press to tune to previous ◀◀ or next ▶▶ station, press and hold to seek the next strongest Weatherband station.



PRESETS 1-7: Press to recall preset Weatherband station.

For owner's manual, please visit <http://www.asaelectronics.com/manuals-guides>.