



M A R I N E

MSR3007 Quick Reference Guide

Basic Operation

Power On/Off: Push to turn power ON or OFF.

MODE: With each press of the button the radio will change through the following modes: TUNER (AM/FM selected through BAND button), *SAT, CD, AUX and *iPOD.



MUTE: Press to MUTE audio. **RESET:** Press to RESET settings.

EQ/iX-BASS: Press to choose one of the predefined bass and treble curves. Press and hold to turn loudness ON/OFF.

AUDIO MENU: With each press of the button choose from the following AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), & FADER (front to back). Press and hold to access the SYSTEM MENU.

AM/FM/RBDS Tuner Controls

MUTE: Press to MUTE audio.



STATION STORE BUTTONS:
Press & hold to store current channel playing. Momentarily press to recall stored channel.
NOTE: you can store up to 18 channels (6 channels per band FM1, FM2, FM3, AM1, AM2).

TUNE: Press > to tune UP in frequency. Press < to tune DOWN in frequency. Press and hold to auto search.
BAND: Press to select preset group FM1, FM2, FM3, AM1, or AM2 each with 6 channel memory locations.
AS/PS: Press to SCAN through currently stored presets. Press & hold to STORE strongest broadcast stations in your area.

CD/MP3 Player Controls*

MUTE: Press to MUTE audio.



PLAY/PAUSE: Press to PLAY or PAUSE current audio.

INTRO SCAN: Press when CD is playing to play each track for 10 seconds in sequential order. Press again to SELECT current song.

RPT: Press to REPEAT current playing track. Press again to release function.

RDM: Press when CD is playing to play each track in RANDOM order. Press again for NORMAL play.

EJECT: Press to EJECT CD.

TUNE/TRK: Press to tune to next track. Press and hold to FAST FORWARD or REWIND current track playing.

*Some features may not be available depending on installed factory options.



M A R I N E

iPod® Controls*

VOL: Press (+) or (-) to navigate through various list selections. Press MODE to select.

MUTE: Press to MUTE audio.



PLAY/PAUSE: Press to PLAY or PAUSE current audio.

RPT: Press to REPEAT current playing song. Press to release function.

RDM: Press to play each song in RANDOM order. Press again for NORMAL play.

TUNE/TRK: Press to tune to next track. Press and hold to FAST FORWARD or REWIND current track playing.

BAND/SEARCH: Press and hold to enter iPod mode. Press again to access PLAYLIST, ARTIST, ALBUM, GENRE, SONG, or COMPOSER (consecutively). Press MODE to select desired play.

SIRIUS® Radio Controls*

CAT: Press (+) or (-) to change CATEGORY. Press MODE to select. Use TUN/TRK to select channel chosen CATEGORY. Press MODE to select.

MUTE: Press to MUTE audio.



STATION STORE BUTTONS: Press & hold to store current channel playing. Momentarily press to recall stored channel. NOTE: you can store up to 18 channels (6 channels per band SIR1, SIR2, SIR3).

TUNER: Press >> to tune channel UP. Press << to tune channel DOWN. Press and hold to fast search.

BAND: Press to select preset group SR1, SR2, or SR3 each with 6 channel memory locations.

Activating your SIRIUS® Subscription —

Before you can listen to Sirius Satellite Radio, you must subscribe to the service.

If a prepaid subscription came with your radio, please inform the SIRIUS operator, who will then verify and activate your subscription.

1. With the radio power ON, press the MODE button to enter Sirius Ready mode. After displaying the SIRIUS logo, the Receiver will update all the SIRIUS channels. NOTE: Don't push any buttons or perform any operations until updating has been completed.
2. Once updated and the SIRIUS channels are received, the display will change to "Call 1-888-539-SIRIUS to Subscribe" and will place you in SIRIUS Satellite Radio's Preview Channel. Channel 184 is the SIRIUS preview channel. You will not be able to tune to any other Sirius Radio channels until you activate your subscription.
3. You will need to access your Sirius ID, which is displayed on channel 000. Press the INFO button on the radio to enter Direct Tuning mode. Using the Tune Adjust UP/DN knob, select digits 000. Press the INFO button to enter your selection. This will display your unit's unique 12-digit SIRIUS ID Number.
4. Write the Sirius ID number down and have your credit card handy.
5. Contact SIRIUS on the Internet: <https://activate.siriusradio.com/>
Follow the prompts to activate your subscription. You can also call SIRIUS toll-free at: 1-888-539-SIRIUS (1-888-539-7474)