



Advent Air **Quick Reference Guide**

Date Released: 07/21/2011

Tracking Number: ADVENTQRG-001

Model / Part Number: AC150 / AC135 /ACM150/ACM135/ ACTH / ACTH11/ACTH12

Re: General operation description.

Details: Default operation of the Advent Air system is as follows:

1. Upon adjusting the temperature control, the LCD will show desired temperature setting for 5 seconds after adjustment.
2. The LCD will then show current ambient temperature for 30 seconds.
3. The LCD will then turn OFF.
4. The LCD will turn ON again once temperature control, ON/OFF or fan speed control is adjusted.
5. Upon achieving desired temperature, the Advent Air system will turn the compressor OFF and the fan will continue to run for 20-30 seconds before turning OFF.

Notes:

There is a 3 minute delay period before the compressor will be allowed to run again. If you manually turn the system OFF, the fan will run for 20-30 seconds before turning OFF. If you turn the system back to the ON position, the system will remain inactive for the duration of this 3 minute delay period.

The reason for this delay period is to allow the sealed system to equalize pressure.