



DESIGNED TO MOVE [YOU]®

# JWM62A

## QUICK REFERENCE GUIDE

### Basic Operation

**POWER:** Push to turn ON or OFF.

**BACK:** Press to exit any menu.

**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease volume.

**AM:** Press to change the source to AM radio mode.

**FM:** Press to change the source to FM radio mode.

**DISC:** Press to change the source to Disc mode.

**BT:** Press to change the source to BLUETOOTH mode.

**USB:** Press to change the source to USB mode.

**AUX:** Press to change the source to AUX mode.



**ZONE OUTPUT:** Press any zone button (A, B or C) to control corresponding speaker output from the stereo. SPK A, SPK B, SPK C will appear on the display.

**AUDIO:** Press to bring up AUDIO ADJUSTMENT options: BASS, TREBLE, BALANCE (left to right), & FADE (front to back).

**LOUDNESS:** Push to turn LOUDNESS ON or OFF.

**SETTINGS:** Press to bring up MENU options: BEEP, ADJUST LCD BRIGHTNESS, TUNING REGION, ADJUST RCA OUT, BLUETOOTH (ON/OFF), PRESET VOLUME, RESET VOLUME KNOB will adjust each MENU option except for 'RESET'.

**RESET:** Use a ball point pen or thin metal object to press the reset buttons.

**AUX IN:** Insert 3.5mm cable from your portable media device.

### App Control



#### App download and operation:

jControl app controls all of the primary functions of the JWM62A directly from your phone or tablet. It can be found by searching for "JENSEN jControl".

After downloading and installing app, pair your device to the JWM62A as instructed in "Bluetooth Operation" section in this guide. Once your device is paired, open the app and use as instructed. (Device must be paired to JWM62A before opening and using app).

Tablet Interface



Mode Menu

Audio Menu

Power

App Info

Back Play/Pause/Mute Forward Volume Control

### AM/FM Tuner Controls

**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease volume.

**STATION STORE PRESETS:** Press & Hold to store current station. Press once to recall stored channel.

**NOTE:** Up to 18 FM & 12 AM channels can be stored.



**MUTE:** Press to MUTE volume. Press again to resume volume.

**AS/PS:** Press to SCAN through currently stored presets. Press & Hold to STORE strongest broadcast stations in your area.

**TUNE/SEEK/TRACK:** Press ►► button to tune frequency higher. Press ◄◄ button to tune frequency lower. Press and hold to scan to next strongest station.

### CD/DVD Player Controls

**VOLUME:** Rotate clockwise to increase volume or counter-clockwise to decrease volume.

**1:** Press once to SUSPEND disc play and twice to RESET disc back to first track.

**2:** Press to EXIT from setting menu.

**3:** Press SHUFFLE songs. Press again to SEQUENTIAL play.

**4:** Press to REPEAT CD track(s) once, continuously, all track or to release function. Press to REPEAT a DVD chapter, title, ALL, or to release function.

**5:** Press to go to next folder.

**6:** Press to go to previous folder.




**PLAY/PAUSE:** Press to PLAY or PAUSE current audio or video.

**EJECT:** Press to EJECT CD or DVD

**TUNE/SEEK/TRACK:** Press ►► button to advance to NEXT TRACK or CHAPTER/TITLE. Press ◄◄ button to go back to PREVIOUS TRACK or CHAPTER/TITLE. In CD mode, press & hold to FAST FORWARD or REVERSE current play. In DVD mode, press & hold to enter FAST FORWARD/REVERSE. Press & hold additional times to step through x2, x4, x8, x20. Press PLAY (►►) to resume.

**TUNE/SEEK/TRACK:**  
Advance or reverse tracks .  
on your device

**ANSWERING PHONE:**  
BT audio will automatically  
pause when a call is answered.  
It will then resume once call has  
ended. In some cases, it may  
be necessary to press the play  
button to resume the BT audio.

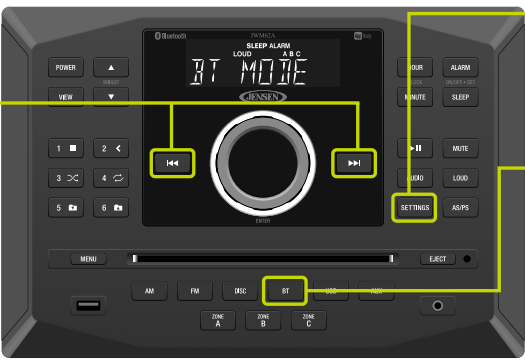

**SETTINGS:** Press & hold to  
navigate through menu options,  
until BT menu options is reached.  
Press ENTER to select  
DEVICE LIST or PAIR.

**PAIR DEVICE VIA BLUETOOTH:**  
Make sure the device you intend  
to pair with is on and ready to  
pair.

1. Press BT button to enter  
Bluetooth mode.
2. Press and hold BT button to  
start Bluetooth pairing process.  
The JWM62A will display "PAIR"  
and will be available to pair for  
120 seconds.
3. In your device Bluetooth  
settings, select "JWM62A" to  
connect.

- 1: Press once to SUSPEND  
disc play and twice to RESET  
disc back to first track.
- 2: Press to EXIT from setting  
menu.
- 3: Press SHUFFLE songs.  
Press again to SEQUENTIAL  
play.
- 4: Press to REPEAT CD  
track(s) once, continuously, all  
track or to release function.  
Press to REPEAT a DVD  
chapter, title, ALL, or to release  
function.
- 5: Press to go to next folder.
- 6: Press to go to previous  
folder.



**USB:** Connect a USB flash/thumb  
drive for audio playback or mobile  
device for charging.

**PLAY/PAUSE:** Press to PLAY or  
PAUSE current audio or video.

**TUNE/SEEK/TRACK:** Press ►►  
button to advance to NEXT  
TRACK. Press ◀◀ button to  
advance to PREVIOUS TRACK.  
Press & hold additional times to  
step through x2, x4,x8, x20.  
Press PLAY (►||) to resume.

**BRIGHTNESS CONTROL:**  
Press the ▲ button to  
increase the LCD brightness  
or press the ▼ button to  
decrease the LCD  
brightness.

**VIEW:** Press to toggle clock  
display or ID3 Tag  
information view.



**ALARM :** Press to turn ALARM  
ON or OFF. Press & Hold to set  
time.

**SLEEP MODE :** Press to enter  
sleep timer: 15, 30, 45, 60, 0  
minutes.

**TIME SET:** Press and hold  
the Hour or Minute to enter  
time set, Press Hour button  
to adjust hour and press  
Minute button to adjust  
minute either CLOCK or  
ALARM time.

For owner's manual, please visit <http://www.asaelectronics.com/manuals-guides>.