



CR2481J Troubleshooting Guide

Unit will not power ON

- Confirm power cord is connected to a live 110VAC wall outlet.

No Picture

- Verify TV is on the correct input.
- If no video is present, check video sources and cabling for any issues.

Snowy Picture

- Check to see if the Antenna is correctly connected.
- Check the condition of the coax lead or patch cable connection.

No Sound

- Check that mute function is off.
- Verify Volume level.
- Verify external source audio output is connected to TV audio input.

Remote Control not working

- Check batteries are installed correctly, replace if necessary.
- Confirm there is clear line of sight between remote and TV.