



MCD5112 Troubleshooting Guide

Radio will not turn ON

- Try the RESET button.
- Check fuse.
- Confirm 12V+ on the ACC+ wire (RED wire).
- Confirm 12V+ on the Memory/Battery (YELLOW wire).
- Confirm Ground.

Radio turns ON, but no sound

- Verify **Volume**, **Fader/Balance**, **Mute** controls are set correctly (see owners manual).
- Try RESET button.
- Verify proper speaker connections.
- Check for shorts or loose connections on speaker wires.

CD does not load fully

- Make sure unit has power and no other CD is currently inside.
- Inspect radio's chassis to verify shipping screw(s) have been removed.

CD does not play correctly

- Check to make sure CD is inserted correctly.
- Verify CD is free from dirt, scratches, etc.
- Check with factory CDs.
- Check factory original CDs for compatibility warnings (due to various copy-protection, multi-media content, etc).
- Disc skips during playback – verify you have not exceeded 30 degrees mounting angle.

No AM or FM reception

- Verify you are tuned to a valid station.
- Check your antenna connection on rear of stereo.
- Try a different antenna.