



MDV6115G Troubleshooting Guide

Radio will not turn ON

- Try the reset button.
- Check fuse.
- Check 12V+ on battery wire to radio (YELLOW wire).
- Check 12V+ on accessory wire to radio (RED wire).
- Check Ground.

Radio turns ON, but no sound

- Verify **Volume**, **Fader/Balance**, **Mute** controls are set correctly (see owners manual).
- Try RESET button.
- Verify proper speaker connections.
- Check for shorts or opens on speaker wires.

CD/DVD does not load fully

- Make sure unit has power and no other CD/DVD is currently inside.
- Inspect radio's chassis to verify shipping screw(s) have been removed.

CD/DVD skips

- Verify proper mounting angle.
- Verify mounting strap is secure.

CD/DVD does not play correctly

- Check to make sure disc is inserted correctly.
- Verify disc is free from dirt, scratches, etc.
- Check with factory CDs.
- Check factory original CDs for compatibility warnings (due to various copy-protection, multi-media content, etc).

No AM or FM reception

- Verify you are tuned to a valid station.
- Check your antenna connection on rear of stereo.
- Try a different antenna.

DVD plays sound but no video

- Make sure the video cable is routed from the video output (yellow RCA) to the input on the television.

Unit does not respond to Remote Control

- Verify that you have a clear line of sight for the IR signal.
- Verify proper install of battery.
- Verify battery is fresh.
- Confirm the remote IR eye has a solid connection (if applicable).
- Confirm remote cable is properly connected.
- Replace with known good remote.

B. Woods
Tech Services
05.23.07