



MW912B Troubleshooting Guide

Microwave will not turn ON

- Verify power cord is plugged in to an active AC outlet.

Microwave does not heat food sufficiently

- Verify power levels and cook times are set appropriately for content.

Condensation appears inside door glass

- Verify proper ventilation is achieved in application.
 - Louvers should not be blocked.
 - Metal ducts should be attached to the top and bottom of microwave.