

# **TK2455J** Troubleshooting Guide

### Unit will not power on w/ front Power button

- Confirm power cord is connected to a live 110VAC wall outlet.
- Power indication LED on unit is red in color.

### No Picture

- Verify unit is turned ON.
- Verify you have chosen an active source.
- Verify antenna is connected to TV.
- Verify external source is connected to correct TV input.
- Verify external source is turned ON.

## **Snowy Picture**

- Check to see if the Antenna is correctly connected.
- Check the condition of the coax lead or patch cable connection.

## **No Sound**

- Check that mute function is off.
- Increase the volume.
- Verify external source audio output is connected to TV audio input.

## **Remote Control not Working**

- Check batteries are installed correctly, replace if necessary.
- Aim the remote controller towards the unit remote sensor.