



## WHPRF01 Troubleshooting Guide

### Unit will not turn ON

- Verify the power switch is depressed and operating normally.
- Make sure batteries are properly inserted.
- Try new batteries.

### No Sound

- Make sure headphones are ON.
- Make sure volume is turned up.
- Make sure RF transmitter is ON.
- Make sure you are within range of the RF transmitter.
- Make sure the headphones and RF transmitter are on the same channel.
- Confirm there is a FM transmitter installed and that it is connected properly and functioning.