



## WTXIR01A Troubleshooting Guide

### No Sound

- Confirm 12V+ on the red wire lead.
- Confirm ground.
- Verify connections with external source on both audio inputs.
- Verify external source audio is turned ON.
- Make sure headphones are ON.
- Make sure volume on headphones is turned up.
- Make sure headphones are within line-of-sight of IR transmitter.
- Make sure the headphones and IR transmitter are on the same channel.