



## **ACC56M Troubleshooting Guide**

### **Unit does not power ON.**

- Verify the ACC56M is connected to radio with Data Cable.
- Verify radio is powered ON.
- Inspect Data Cable for signs of damage, kinks, sharp bends, broken or bent pins at connections.
- Try a new Data Cable

### **CD cartridge does not load fully**

- Inspect the chassis to verify shipping screw(s) have been removed.
- Make sure you are inserting with correct side up.

### **CD does not play correctly**

- Check to make sure disc is inserted correctly into cartridge.
- Verify disc is free from dirt, scratches, etc.
- Check with factory CDs.
- Check factory original CDs for compatibility warnings (due to various copy-protection, multi-media content, etc).
- Disc skips during playback – verify you have set correct angle adjustment to match installation angle.
- Verify anti-vibration springs are set correctly for horizontal or vertical mounting.