



ASRSB Troubleshooting Guide

No Power

- Verify ground and power connection.
- Verify proper power source is tapped.

Sensors do not detect objects

- Verify ground and power connection.
- Verify proper power source is tapped.
- Verify speaker wire is plugged in and is not in Hi or Lo setting.
- Replace with known good Control Module.

No sound from Speaker

- Verify ground and power connection.
- Verify proper power source is tapped.
- Verify speaker wire is plugged in and is not in Hi or Lo setting.
- Replace with known good speaker.

Zone 1, 2, or 3 Constant

- Check for objects within 6 feet of vehicle.
- Verify if sensor is mounted properly and not too low.
- Verify proper sleeve is used for each sensor.
- Surface may be too rough detecting false signals. For example uneven gravel surfaces or snow.
- Unplug one sensor at a time to isolate the false signal's source.