



DVD4000 Troubleshooting Guide

Unit will not turn ON

- Try the reset button.
- Check fuse.
- Confirm 12V+ on battery wire to radio (GREEN w/White stripe wire).
- Confirm 12V+ on accessory wire to radio (ORANGE w/White stripe wire).
- Confirm Ground.

Unit turns ON, but no sound

- Verify sound system is ON and set properly (input & volume).
- Try RESET button.
- Verify Audio cable is connected from DVD2101 to sound system.

CD/DVD does not load fully

- Make sure unit has power and no other CD/DVD is currently inside.
- Inspect unit's chassis to verify shipping screw(s) have been removed.

CD/DVD skips

- Verify proper mounting angle is not too great.
- Verify mounting strap is secure.

CD/DVD does not play correctly

- Check to make sure disc is inserted correctly.
- Verify disc is free from dirt, scratches, etc.
- Check with factory CDs.
- Check factory original CDs for compatibility warnings (due to various copy-protection, multi-media content, etc).
- Disc skips during playback – verify you have not exceeded 30 degrees mounting angle.

DVD plays sound but no video

- Make sure the video cable is routed from the video output (yellow RCA) to the input on the television.

Unit does not respond to Remote Control

- Verify that you have a clear line of sight for the IR signal.
- Check the batteries.

B. Woods
Tech Services
05.16.07