



FPE1506DV Troubleshooting Guide

Unit will not power on w/ front Power button

- Confirm 12V+ power on the power harness
- Confirm Ground on power harness.
- If using optional 110VAC adaptor (PSJETV), confirm unit is plugged into wall socket.
- Power indication LED on unit is red in color.

No Picture

- Verify unit is turned ON.
- Verify you are on the correct source input.
- Verify antenna is connected to TV.
- Verify external source is connected to correct TV input.
- Verify external source is turned ON.

Snowy Picture

- Check to see if the Antenna is correctly connected.

No Sound

- Check that mute function is off.
- Increase the volume.
- Verify external source audio output is connected to TV audio input.

Remote Control not Working

- Check batteries are installed correctly, replaced if necessary.
- Aim the remote controller towards the unit remote sensor.

DVD will not play

- Make sure DVD is loaded correctly.
- Make sure DVD is free from dirt, scratches and fingerprints.
- Try a different DVD.