



JCD3007 Troubleshooting Guide

Radio will not turn ON

- Try the reset button.
- Check fuse.
- Check 12V+ on Accessory/Ignition wire to radio (RED wire).
- Check Ground.

Radio turns ON, but no sound

- Verify **Volume, Fader/Balance, Mute** controls are set correctly (see owners manual).
- Try RESET button.
- Verify proper speaker connections.
- Check for shorts or opens on speaker wires.
-

CD does not load fully

- Make sure unit has power and no other CD is currently inside.
- Inspect radio's chassis to verify shipping screw(s) have been removed.

CD does not play correctly

- Check to make sure disc is inserted correctly.
- Verify disc is free from dirt, scratches, etc.
- Check with factory CDs.
- Check factory original CDs for compatibility warnings (due to various copy-protection, multi-media content, etc).
- Disc skips during playback – verify you have not exceeded 30 degrees mounting angle.

No AM or FM reception

- Verify you are tuned to a valid station.
- Check your antenna connection on rear of stereo.
- Replace with another antenna.