



FPE1507DV Troubleshooting Guide

Unit will not power ON

- Confirm 12V+ on DC power harness.
- Verify good Ground on DC power harness.
- Confirm power cord is connected to a live 110VAC wall outlet if using AC adaptor.

No Picture

- Verify TV is on the correct input.
- If no video is present, check video sources and cabling for any issues.

Snowy Picture, Pixilation or Picture freezes

- Check to see if the Antenna is correctly connected.
- Check the condition of the coax lead or patch cable connection.
- Pixilation or Picture freeze occurs when viewing digital channels and there is poor reception.
 - Pixilation and picture freezing can also occur when using Satellite TV service with poor reception.

No Sound

- Check that MUTE function is off.
- Verify Volume level.
- Verify external source audio output is connected to TV audio input.

Remote Control Not Working

- Check batteries are installed correctly, replace if necessary.
- Confirm there is clear line of sight between remote and TV.

DVD will not play

- Make sure DVD is loaded correctly, free from dirt, scratches and fingerprints.
- Try multiple store bought DVD's.
- If using burned DVD's, verify DVD is finalized; use better quality discs; burn on a lower speed rate; try using alternate burning programs.