



MS160 Troubleshooting Guide

Radio will not turn ON

- Try the reset button.
- Check fuse.
- Check 12V+ to radio.
- Check Ground.

Radio turns ON, but no sound

- Verify **Volume**, **Fader/Balance**, **Mute** controls are set correctly (see owner's manual).
- Try reset button.
- Verify proper speaker connections.
- Check for shorts or opens on speaker wires.

No CD Changer functions

- Verify you are on correct mode.
- Verify connection between radio and CDC.
- Verify CD cartridge is loaded and inserted correctly.

No AM or FM reception

- Verify you are tuned to a valid station.
- Check your antenna connection on rear of stereo.
- Try a different antenna.

Wired remote control not functioning

- Try the reset button.
- Verify remote is securely connected to the radio directly or via extension cable.
- If using extension cable, try connecting direct to radio. If the remote works in this manner, the extension cable is most likely damaged. Replace extension cable.
- If the remote still does not work when connected direct to radio, the remote could be defective. Replace with new remote.