



VOM74TQ Troubleshooting Guide

Monitor will not power up

- Check fuse.
- Check 12v+ to monitor.
- Check ground connection.

No image on screen

- Verify monitor is on correct camera input.
- Verify cable is connected to monitor.
- Verify camera is connected to cable.
- Connect known good camera and cable to monitor.
 - If image appears connect cable to existing camera.
 - If image remains replace original cable.
 - If image disappears replace original camera.
 - Plug camera directly into monitor input bypassing extension cable

Function buttons on monitor do not work but there is an image on the screen

- Verify there is no voltage on any of your trigger wires

Touch Screen not functioning

- Remove power and reapply power
- Reset monitor (instructions below*)

Inputs do not trigger properly (Standby or otherwise)


- See owner's manual for proper wiring.
- Confirm 12v + to each appropriate trigger lead.

No audio

- Verify selected camera has audio (Camera Input 3 only).
- Verify volume setting.

NTSC/PAL MODE

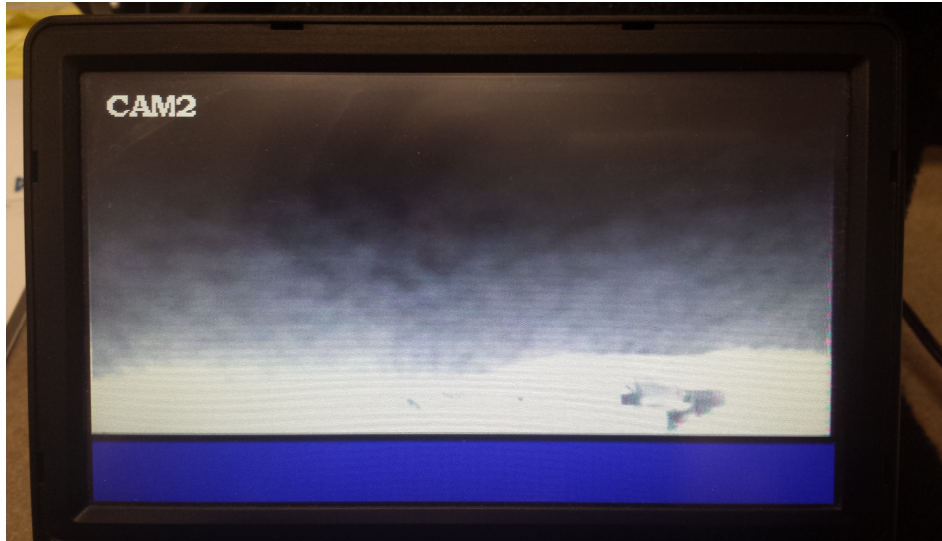

- These modes refer to the video operating system; in the US, NTSC is used and in Europe PAL mode is used. When this unit is switched to PAL mode in the US the screen will appear differently. See Below:



•

The monitor will show a one inch tall horizontal line on the bottom of the screen solid in color. In order to switch the mode back to NTSC Press menu/ setup/ system this should correct the issue.

RESET

Press  and  for more than 3 seconds, the screen will show up "V015 DEFAULT SET", the monitor will return to factory setting.

.

Tech Services
11.23.14