



## VR180 Troubleshooting Guide

### Radio will not turn ON

- Try the reset button.
- Check fuse.
- Confirm 12V+ on battery wire to radio (YELLOW wire).
- Confirm 12V+ on accessory wire to radio (RED wire).
- Confirm Ground.

### Radio turns ON, but no sound

- Verify **Volume**, **Fader/Balance**, **Mute** controls are set correctly (see owners manual).
- Try RESET button.
- Verify proper speaker connections.
- Check for shorts or opens on speaker wires.

### CD does not load fully

- Make sure unit has power and no other CD is currently inside.
- Inspect radio's chassis to verify shipping screw(s) have been removed.

### CD does not play correctly

- Check to make sure disc is inserted correctly.
- Verify disc is free from dirt, scratches, etc.
- Check with factory CDs.
- Check factory original CDs for compatibility warnings (due to various copy-protection, multi-media content, etc).
- Disc skips during playback – verify you have not exceeded 30 degrees mounting angle.

### No AM or FM reception

- Verify you are tuned to a valid station.
- Check your antenna connection on rear of stereo.
- Try a different antenna.

### **“CODE” appears on the display**

1. Turn the radio on.
2. When the radio displays the "CODE" message, press the 2 and 4 preset buttons simultaneously and hold more than 2 seconds
3. Release the preset buttons; the display will show “CODE CL”; Then press 2 preset and 4 preset simultaneously again to confirm this cancel.

B. Woods  
Tech Services  
05.11.07