
Date:	10/30/2023	Work Instruction: ZAEJHD62HD	Written By
Doc. Revision:	Α		R. Priddy
Revision Date:			Approved By
ASA Model #:	ZAFJHD62HD		Joe Caban

- 1. Pull parts per JDE work order
- 2. Place parts in the box
- 3. Put label on the outside of the box.
- 4. Get First article inspection.

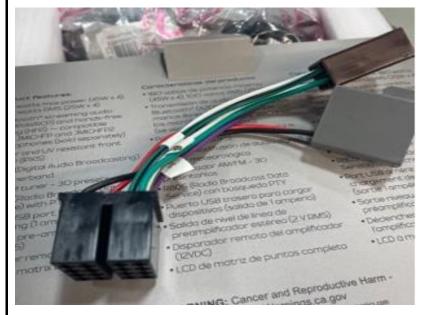



10/30/2023