


MSR2007/2107 COMMANDER MOUNTING TEMPLATE

7/8" HOLE REQUIRED
FOR CABLE

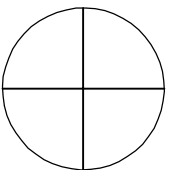

M5X8 SCREWS (2) REQUIRED FOR
MOUNTING COMMANDER FROM REAR.
MAXIMUM SCREW DWPTH INTO
COMMANDER 1/4".

M4 MOUNTING SCREWS (4-PCS)
MINIMUM SCREW LENGTH 1 1/2"

*****Note: Verify Hole Location Before Drilling!**

