

**Quick Reference Guide**

Date Released: 4/26/12


Tracking Number: QRGMW912B\_001

Model / Part Number: MW912B

Re: Thin trim installation notes

The feet of the MW912B Microwave must rest below the cabinet opening so the lower trim screws can be affixed. If the shelf of the microwave cabinet is even with the lower opening, cleats or other provisions will be required to attach the lower trim.

Note: Applications can not obstruct the air flow ducts, (upper/lower) or block any of the trim's louvers.

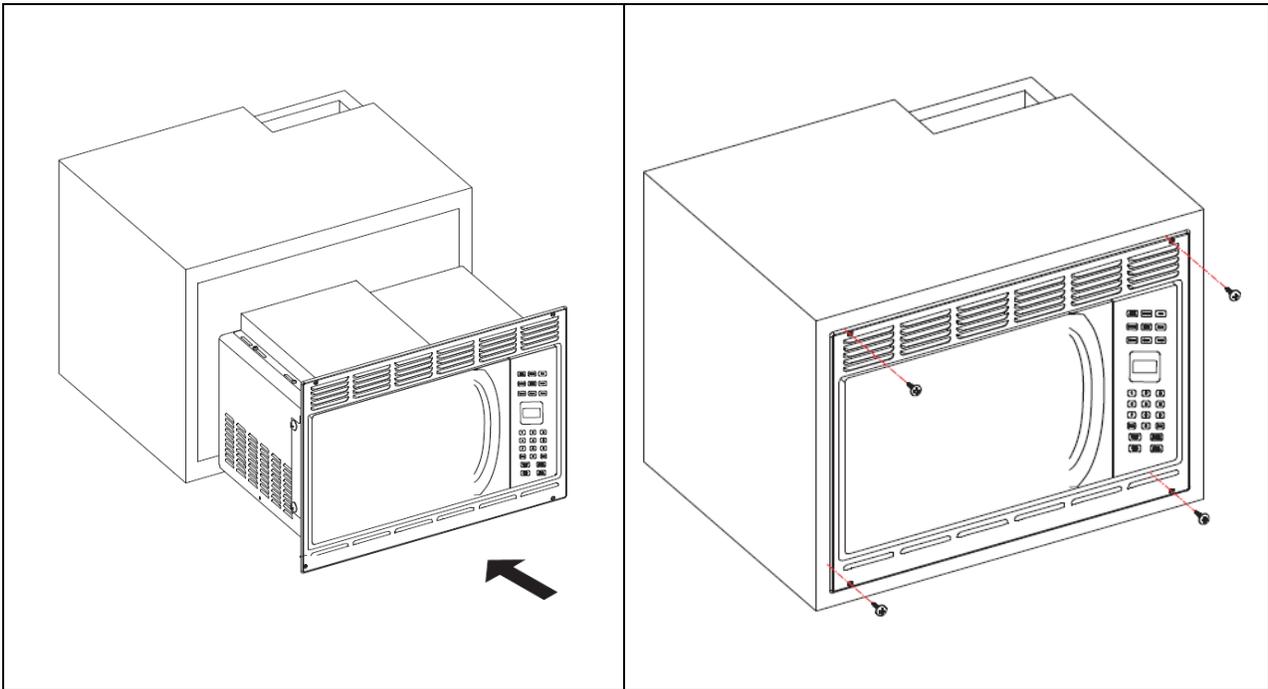

Recommended cabinet opening: 13-3/4" H x 20" W

Recommended Inside cabinet dimensions: 14" H x 20-3/8" W x 16-1/4" D

Microwave must set 1/2" to 5/8" below the cabinet opening.